


## Mounting the Enclosure

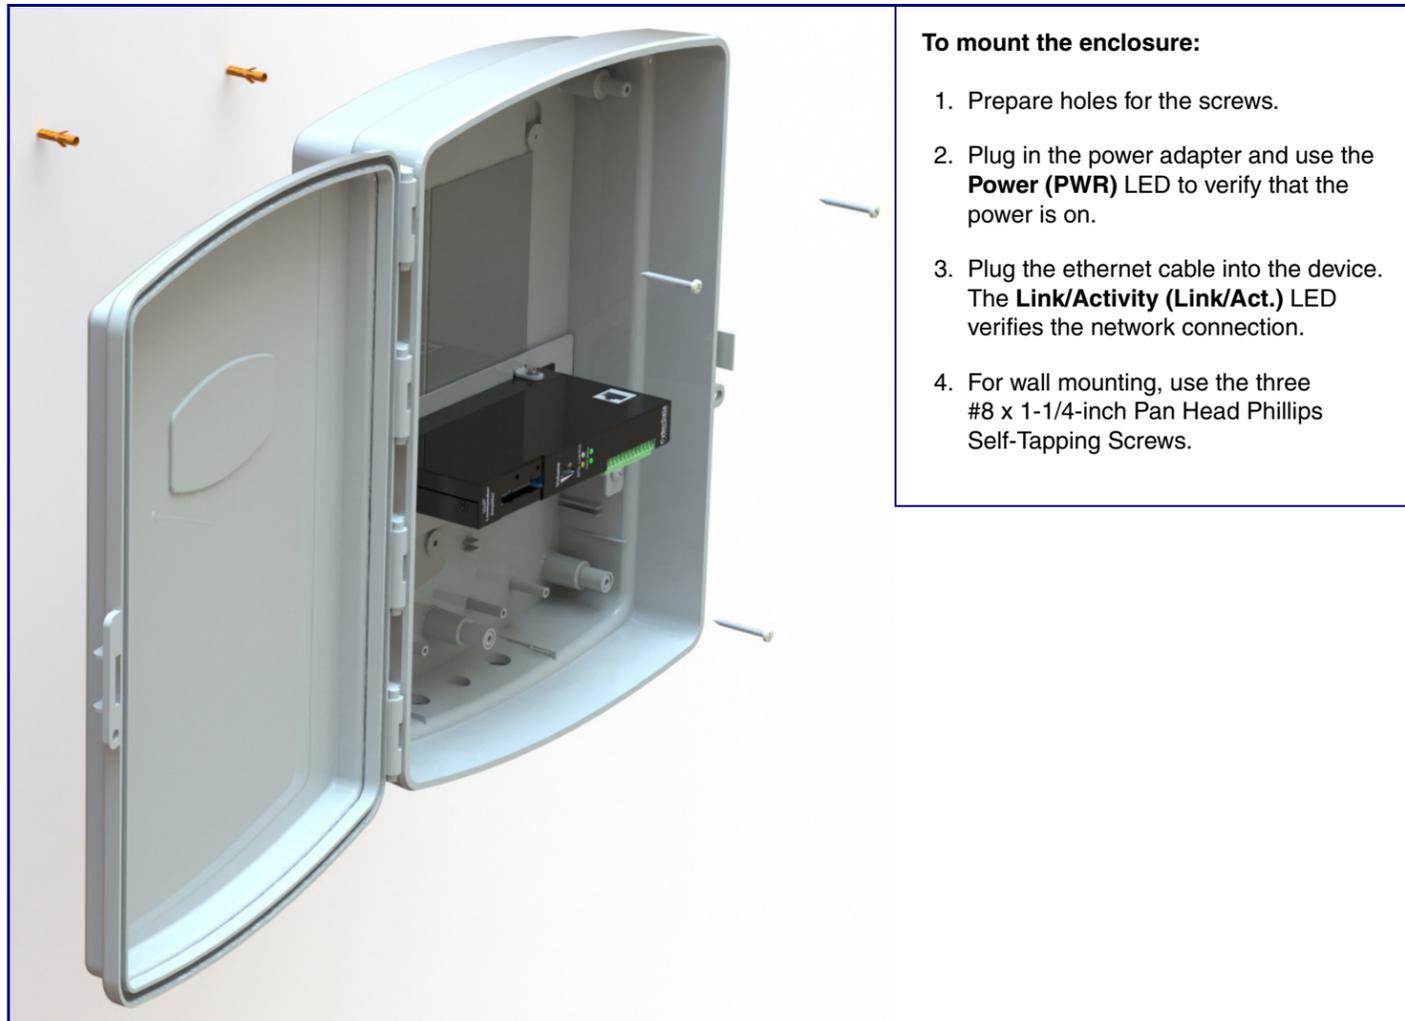

### To mount the enclosure:

1. Prepare holes for the screws.
2. Plug in the power adapter and use the **Power (PWR)** LED to verify that the power is on.
3. Plug the ethernet cable into the device. The **Link/Activity (Link/Act.)** LED verifies the network connection.
4. For wall mounting, use the three #8 x 1-1/4-inch Pan Head Phillips Self-Tapping Screws.

# SIP Loudspeaker Amplifier (PoE)

SIP Compliant

011405



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

## Getting Started

- Download the Operations Guide PDF file from the **Documents** tab at the following webpage: <http://www.cyberdata.net/voip/011405/>
- Create a plan for the locations of your paging amplifiers.
- **WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.**
- **WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.**
- **WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.**
- **WARNING: The SIP Loudspeaker Amplifier enclosure is not rated for any AC voltages!**

## Parts

(1) Assembly 	<b>(1) Wall Mounting Kit</b>	
	(3) #8 Plastic Anchors 	(3) #8 x 1-1/4" Pan Head Phillips Self-Tapping Screws 
(1) Enclosure 	<b>Additional Parts</b>	
	(1) CAT 5e/CAT6 cable 	(1) PoE Power Injector 

## Contacting CyberData

### Corporate Headquarters

CyberData Corporation  
3 Justin Court  
Monterey, CA 93940, USA

Phone: 831-373-2601  
Fax: 831-373-4193  
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334  
Support: 831-373-2601 ext. 333  
Support Website: <http://support.cyberdata.net/>  
RMA Department: (831) 373-2601 ext. 136  
RMA Email: [RMA@CyberData.net](mailto:RMA@CyberData.net)  
RMA Status: <http://support.cyberdata.net/>  
Warranty Information: <http://support.cyberdata.net/>

Features

**VoIP Loudspeaker Amplifier**  
RTFM

**Speaker Volume**

**Speed (SPD) LED (AMBER)**  
The **Speed (SPD)** LED illuminates **AMBER** for a 100Mb link or is off for a 10MB link when the network link to the device is established.

**Link/Activity (Link/Act.) LED (GREEN)**  
The **GREEN Link/Activity (Link/Act.)** LED blinks to indicate network traffic.

**Status LED (GREEN)**  
The **GREEN Status** LED illuminates after supplying power to the device.

**Power (PWR) LED (GREEN/BLUE)**  
The **Power (PWR)** LED is **GREEN** in low power mode (802.3af) and **BLUE** during high power mode (802.3at).

\*See the Operations Guide for more information about the features in this section.

Dimensions and Mounting Template

